

LASER SENSOR

LS-B200W

Thank you for purchasing the TOPCON LS-B200W. For the best performance of the instruments, please read these instructions carefully and keep them in a convenient location for future reference.


GENERAL HANDLING PRECAUTIONS

Before starting work or operation, be sure to check that the system is functioning properly.

- Remove the batteries from the instrument when you will not be using it for long period.
- Replace all 4 batteries with new ones at the same time. Do not mix used and new batteries, and do not mix different types of batteries together.
- Use alkaline dry batteries. Nickel hydrogen dry batteries and nickel cadmium dry batteries can be used too, but the operating time is different from the time of alkaline dry batteries.
- Do not submerge the instrument in water.**
- This instrument is designed based on the International Standard IPX 6, but it is not protected from a high pressure water stream or submergence.
- When washing the instrument, avoid spraying it with a high pressure stream of water from a water hose. The inside of the instrument will be damaged by the water.
- Be sure to charge the battery within the charging temperature range. Charging temperature range: 10 to 40°C
- Battery is an expendable item. The decline in retained capacity depending on the repeated charging/discharging cycle is out of warranty.
- Affection of the radio waves
When using the instrument in the following place, the strong radio wave may cause faulty operation.
 - Near the instrument occurring strong radio waves. (e.g. Transceiver)
 - Near the radio wave towers such as television or radio.
- When transporting the instrument, provide some protection to minimize risk of shock. Heavy shock may affect beam accuracy.
- In addition to the laser beam emitted from the rotating laser, the laser sensor may be sensitive to smartphone screens, LED lamps, fluorescent lamps, construction lamps, and other modulated lights. In this case, turn off these modulated lights that may be the cause, or block them before performing measurement.
- If an object (glass window, car windshield, etc.) that may reflect a laser beam is close to this instrument, the laser sensor may malfunction. When using this instrument, block the laser beam to the direction of a reflective object.

Examples of malfunctions:

- The display shows "●●●" even though the location is not a datum position.
- Errors occur for the datum position.
- The display does not show "●●●" even though the location is a datum position.

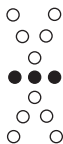

- Be sure that the laser emitting window of this instrument, and the beam receiving window of the laser sensor are free from dirt (oil, water droplets, etc.). The measurement result may be in error if these windows are dirty.

Bluetooth Wireless Technology

- Bluetooth function may not be built in depending on telecommunications regulations of the country or the area where the instrument is purchased. Contact your local dealer for the details.
- Use of this technology must be authorized according to telecommunications regulations of the country where the instrument is being used. Contact your local dealer in advance. (ICP "Regulatory Information")
- TOPCON CORPORATION is not liable for the content of any transmission nor any content related thereto. When communicating important data, run tests beforehand to ascertain that communication is operating normally.
- Do not divulge the content of any transmission to any third party.
- Radio interference when using Bluetooth technology
Bluetooth communication with the LS-B200W uses the 2.4 GHz frequency band. This is the same band used by the devices described below.
 - Industrial, scientific, and medical (ISM) equipment such as microwaves and pacemakers.
 - portable premises radio equipment (license required) used in factory production lines etc.
 - portable specified low-power radio equipment (license-exempt)
 - IEEE802.11b/IEEE802.11g/IEEE802.11n/IEEE802.11ax standard wireless LAN devices.

The above devices use the same frequency band as Bluetooth communications. As a result, using the LS-B200W within proximity to the above devices may result in interference causing communication failure or reduction of transmission speed.

Although a radio station license is not required for this instrument, bear in mind the following points when using Bluetooth technology for communication.

- Do not use the LS-B200W in proximity to microwaves.
 - Microwave ovens can cause significant interference resulting in communication failure. Perform communication at a distance of 3m or more from microwave ovens.
- Regarding portable premises radio equipment and portable specified low-power radio equipment:
 - Before starting transmission, check that operation will not take place within the vicinity of portable premises radio equipment or specified low-power radio equipment.
 - In the case that the instrument causes radio interference with portable premises radio equipment, terminate the connection immediately and take measures to prevent further interference (e.g. connect using an interface cable).
 - In the case that the instrument causes radio interference with portable specified low-power radio equipment, contact your local dealer.
- When using Bluetooth function in proximity to IEEE802.11b/IEEE802.11g/IEEE802.11n/IEEE802.11ax standard wireless LAN devices, turn off all devices not being used.
 - Interference may result, causing transmission speed to slow or even disrupting the connection completely. Turn off all devices not being used and vice versa.
- Refrain from using the LS-B200W in proximity to televisions and radios.
 - Televisions and radios use a different frequency band to Bluetooth communications. However, even if the LS-B200W is used within proximity to the above equipment with no adverse effects with regard to Bluetooth communication, moving a Bluetooth compatible device (including the LS-B200W) closer to said equipment may result in electronic noise in sound or images, adversely affecting the performance of televisions and radios.
- Precautions regarding transmission
 - For best results
 - The usable range becomes shorter when obstacles block the line of sight, or devices such as PDAs or computers are used. Wood, glass and plastic will not impede communication but the usable range becomes shorter. Moreover, wood, glass and plastic containing metal frames, plates, foil and other heat shielding elements as well as coatings containing metallic powders may adversely affect wireless communication and concrete, reinforced concrete, and metal will render it impossible.
 - Use a vinyl or plastic cover to protect the instrument from rain and moisture. Metallic materials should not be used.
 - Reduced range due to atmospheric conditions
 - The radio waves used by the LS-B200W may be absorbed or scattered by rain, fog, and moisture from the human body with the limit of usable range becoming lower as a result. Similarly, usable range may also shorten when performing communication in wooded areas. Moreover, as wireless devices lose signal strength when close to the ground, perform communication at as high a position as possible.



TOPCON CORPORATION cannot guarantee full compatibility with all Bluetooth products on the market.

PRECAUTIONS FOR SAFE OPERATION

For the safe use of the product and prevention of injury to operators and other persons as well as prevention of property damage, items which should be observed are indicated by an exclamation point within a triangle used with WARNING and CAUTION statements in this operator's manual. The definitions of the indications are listed below. Be sure you understand them before reading the manual's main text.

DEFINITION OF INDICATION

	WARNING	Ignoring this indication and making an operation error could possibly result in death or serious injury to the operator.
	CAUTION	Ignoring this indication and making an operation error could possibly result in personal injury or property damage.



This symbol indicates items for which caution (hazard warnings inclusive) is urged. Specific details are printed in or near the symbol.



This symbol indicates items which are prohibited. Specific details are printed in or near the symbol.



This symbol indicates items which must always be performed. Specific details are printed in or near the symbol.

WARNING

- There is a risk of fire, electric shock or physical harm if you attempt to disassemble or repair the instrument yourself. This is only to be carried out by TOPCON or an authorized dealer, only!
 - Risk of fire or electric shock. Do not use damaged power cable, plug and socket.
 - Risk of fire or electric shock. Do not use a wet battery.
 - May ignite explosively. Never use an instrument near flammable gas, liquid matter, and do not use in a coal mine.
 - Battery can cause explosion or injury. Do not dispose in fire or heat.
 - To prevent shorting of the dry battery in storage, apply insulating tape or equivalent to the terminals. Otherwise shorting could occur, resulting in fire or burns.
 - Battery can cause explosion or injury. Remove battery when using the connector for external power supply.**
 - Do not use within the vicinity of hospitals. Malfunction of medical equipment could result.
 - Use the instrument at a distance of at least 22 cm from anyone with a cardiac pacemaker. Otherwise, the pacemaker may be adversely affected by the electromagnetic waves produced and cease to operate as normal.
 - Do not use onboard aircraft. The aircraft instrumentation may malfunction as a result.
 - Do not use within the vicinity of automatic doors, fire alarms and other devices with automatic controls as the electromagnetic waves produced may adversely affect operation resulting in an accident.
- CAUTION**
- Do not touch liquid leaking from dry batteries. Harmful chemicals could cause burns or blisters.

STANDARD PACKAGE COMPONENTS

- LS-B200W Instrument 1pc.
- Carrying case 1pc.
- Instruction manual 1pc.
- Laser Manager Guide 1pc.
- Regulatory Information 1pc.

Dry battery type*

- Battery holder DB-83 1pc.
- Dry cell batteries (4 x C) are sold separately.



*In some destinations, a rechargeable battery is already set in the main unit.

Rechargeable battery type (Optional accessories)


- Ni-MH battery pack BT-83Q 1pc.
- AC/DC converter AD-11 1pc.



PARTS OF THE INSTRUMENT AND FUNCTIONS

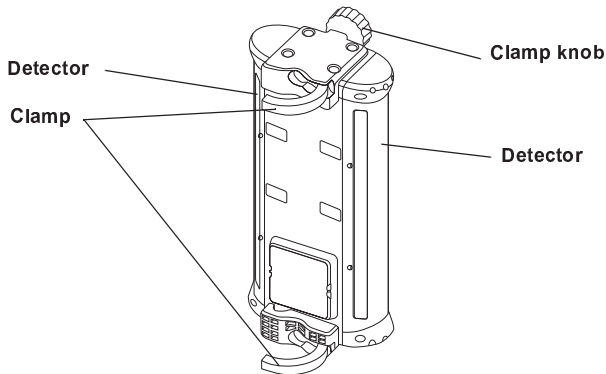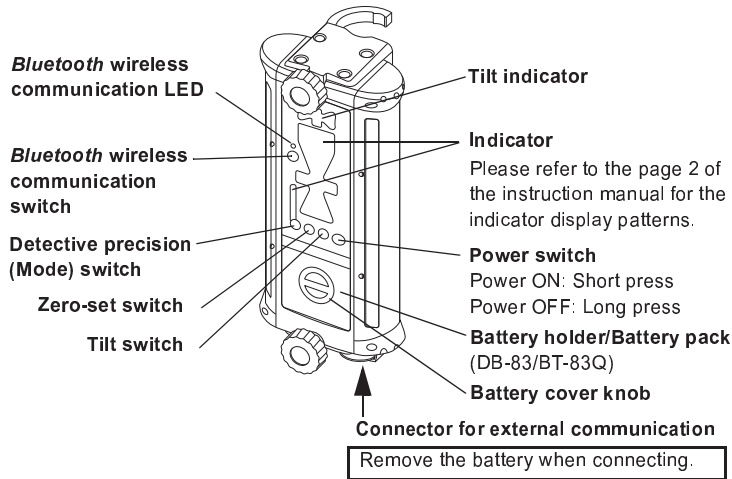

Pipes that can be installed onto the LS-B200W are as described below.

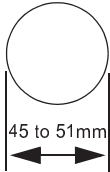

Shape: Cylindrical
Dimension: 45 to 51mm in diameter
Please refer to the instruction manual for the machine or contact the machine manufacturer for instructions on installing the mast onto the machine (by welding, etc.).

REPLACING THE BATTERY

Dry battery

- 1 Remove the DB-83 battery holder by turning the battery cover knob.
- 2 Remove the old batteries and replace with new ones.


Rechargeable battery

- 1 Remove the BT-83Q by turning the battery cover knob.
- 2 Attach the charged BT-83Q to the LS-B200W.
- 3 Attach the battery cover by turning the battery cover knob.

- Batteries generate power using a chemical reaction and as a result have a limited life-time. Even when in storage and not used for long periods, battery capacity deteriorates with the passage of time. This may result in the operating time of the battery shortening despite having been charged correctly. In this event, a new battery is required.


OPERATION

- 1 Position a rotating laser and turn on the laser.
- 2 Raise or lower the machine blade or arm to position the cutting edge or bucket at the desired grade elevation.
- 3 Mount the LS-B200W onto the mast near the path of the laser beam and turn on the LS-B200W.
- 4 Keep the machine blade or arm motionless and raise or lower the LS-B200W and adjust until ON-GRADE position are blinking. This is the ON GRADE position.
- 5 Securely clamp the LS-B200W in place. The reference position has been set.
- 6 While operating, use the LED display to continually check grade, moving the blade or cutting / filling according to the direction of the LS-B200W display.

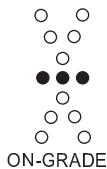

INDICATOR


Precision mode

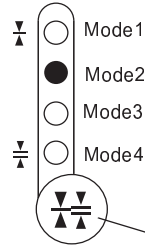

It is possible to change the detective precision of the instrument. Please select Mode 1 to 4 according to the objective of the operation.
(☞ "Laser beam positions and display patterns")
Pressing the detective precision (Mode) switch will change the mode and the corresponding LED lamp will light up. (During battery remaining display shown below, the lamp will blink.)

Detective precision (Mode) switch

LS-B200W Battery remaining display

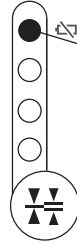

Battery remaining display LED

Battery remaining for the LS-B200W will be displayed at 3 levels.

Goes out:

Battery is sufficient. (When Mode 1 is selected, the lamp will light up.)


Blinks slowly:

The power is low, but sensor is still usable.

Blinks quickly:

Dead battery. Replace the dry battery with new one or recharge the battery (BT-83Q Optional accessories).


Rotating laser battery warning display

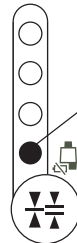

Rotating laser battery remaining warning LED


A blink shows that the rotating laser power is low. (This function is not usable to the rotating laser which does not have the function to output alarm signal.)

Height alert warning of rotating laser

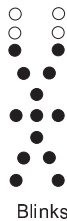

A blink signifies that the height alert function of rotating laser is operating. (This function is not usable to the rotating laser which does not have the height alert and the function to output alarm signal.)


Power-save function (Effective only when using the internal battery)

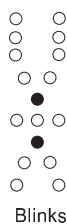

This instrument will enter the power-save mode when no switches are operated or no laser beam is received for about five minutes. During the power-save mode, two LEDs (one yellow and one red) will blink. (When the laser beam is received again, the power-save mode will be automatically turned off. Or when the power switch is pressed again, the power-save mode will be also turned off.)

To disable the power-save function, press the power switch for at least five seconds to turn the power on. When the function is disabled, the LED shown in the figure will blink twice.

Auto-cut off function (Effective only when using the internal battery)

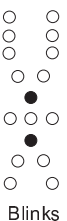

This instrument will automatically power off when no switches are operated or no laser beam is received for about 60 minutes after entering the power-save mode. (To use the instrument again, press the power switch once again.)

To disable the auto-cut off function, press the power switch for at least five seconds to turn the power on. When the function is disabled, the LED shown in the figure will blink twice.

LED brightness adjustment function

(Effective only when using the internal battery)

This instrument detects the ambient brightness and automatically adjusts the LED brightness (high/low). If you want to keep the LED brightness high, turn the power switch on while holding down the detective precision (Mode) switch.

Laser beam positions and display patterns


Indicator (LED)	Detective precision
	Mode1: ±3mm (0.009ft) Mode2: ±6mm (0.019ft) Mode3: ±15mm (0.049ft) Mode4: ±30mm (0.098ft)
	±15mm/±0.05ft (30mm/0.1ft width)
	±30mm/±0.1ft (60mm/0.2ft width)
	Blinks quickly
	±50mm/±0.16ft (100mm/0.33ft width)
	Blinks quickly
	±70mm/±0.23ft (140mm/0.46ft width)
	Blinks slowly
	±125mm/±0.41ft (250mm/0.82ft width)
	Blinks more slowly
	When the laser beam is off to the top or to the bottom

TILT DETECTION FUNCTION

Switching the tilt direction


The tilt direction can be changed.

- Long-press the detective precision(Mode) switch and the tilt switch at the same time. The tilt direction mode setting changes in the following order: "Back and Forth," "OFF" and "Right and Left." At this time, the LED at the side of the mark indicating the tilt direction will blink. The LED will not blink when the tilt detection function is switched OFF.

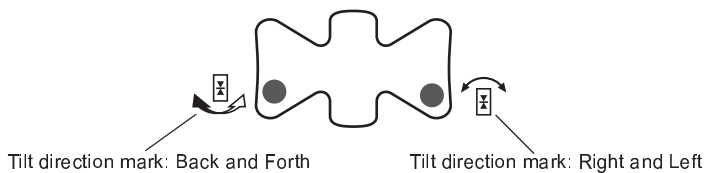

Switching the tilt precision


- Short-press the tilt switch. The tilt precision will change. At this time, the LED at the side of the mark indicating the tilt precision will light up.

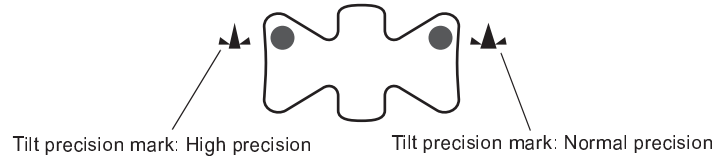


Zero position setting for the tilt sensor

Before using the tilt detection function, set the zero position of the tilt sensor according to the directions below. The tilt direction must be set before setting the zero position.

- Raise or lower the machine blade or arm where the LS-B200W is installed to position the cutting edge or bucket at the desired slope.
- Long-press the tilt switch. The tilt angle for the LS-B200W will set to 0°.

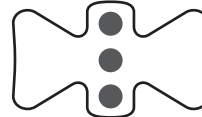

The LED lights up as shown in the figure for three seconds when the zero position is set.

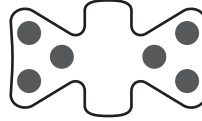

The LED blinks as shown in the figure for three seconds when you have failed to set the zero position.

To set the vertical zero position of tilt sensor to perpendicular.

- Vertically position the machine blade or arm where the LS-B200W is installed.
- Rotate the LS-B200W on the pole each by 90°, and confirm that the green LED in the tilt indicator is blinking in all directions.
- Set the zero position.

TILT ANGLES AND DISPLAY PATTERNS

Tilt directions: Right and Left

	High precision : ±1° Normal precision : ±2.5°
	±5°
	More than ±5°

Tilt directions: Back and Forth

	High precision : ±1° Normal precision : ±2.5°
	High precision : More than ±1° Normal precision : More than ±2.5°

Tilt indication will be displayed during laser detection and for 20 seconds after switch operation.


CHANGING THE ON-GRADE POSITION FUNCTION

The ON-GRADE position can be changed to the position where laser beam is detected. Using this function when installing the LS-B200W on the pole of the machine allows easy setting of the height at which the ON-GRADE will be displayed on the LS-B200W. The range in which the ON-GRADE position can be changed is ±75mm (total of 150mm) from the center of the detective range.


In order to set the ON-GRADE position at high precision, set it while the laser beam is stable. When setting the ON-GRADE position while the laser beam is unstable (when using at a long-distance - more than 150m - or when atmospheric condition is unstable due to air shimmering or other conditions), the sensor will automatically detect it and the LED indicating the failure will be displayed while changing the ON-GRADE position.

Setting the ON-GRADE position change

1 Long-press the zero-set switch while detecting the laser beam.

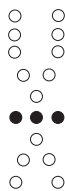


When changing the ON-GRADE position, the LED lights up for three seconds, as shown in the figure. The position where the laser beam is being detected will be the ON-GRADE position.

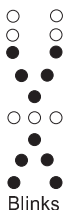

The LED lights up as shown in the figure for three seconds when you have failed to change the ON-GRADE position. Be careful not to change the position at which the laser beam is detected and try setting once again.

The LED display while changing the ON-GRADE position

The LED display indicating beam position and the LED (1 green) in the center will blink.

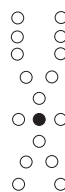

Blinks quickly

Canceling the ON-GRADE position change

1 Long-press the zero-set switch when not detecting the laser beam. The ON-GRADE position will be reset.



When the ON-GRADE position change is cancelled, the LED (3 green) will blink for three seconds.



Bluetooth CONNECTION

Using *Bluetooth* communication, LS-B200W can be remotely controlled by devices such as iPhone and Android™.

- *Bluetooth* function may not be built in depending on telecommunications regulations of the country or the area where the instrument is purchased. Contact your local dealer for the details.
- Up to five units of the LS-B200W can be stored for pairing with the controller. If more than five units are paired, they will be deleted in order from oldest to newest.
- When connected with a controller, the connection is held until the time mentioned below.
 - When canceling the connection from the controller; or
 - When pairing is performed with any other controller.
- "Laser Manager" is the name of software used to remotely control and support laser products. It works on devices such as iPhone and Android. The control application "Laser Manager" would be better installed on your controller in advance.
 - If LS-B200W is not displayed during the pairing search in Laser Manager, please complete pairing on the OS. After that, please do pairing again by Laser Manager.
 - When pairing with some instruments on Laser Manager, *Bluetooth* connection between instrument and Laser Manager may take some time. Please remove unnecessary instruments from *Bluetooth* connection history list on Laser Manager.
 - After disconnecting *Bluetooth* by Laser Manager, the instrument icon may not be displayed on the search screen. Please wait for a while and re-enter the *Bluetooth* connection screen again.

Installing laser manager

There are two ways to install Laser Manager:

- Scan the QR code according to the instructions of the included "Laser manager guide".
- Search for "Laser Manager" on the App Store or Google Play. For details on App Store and how to install this application, see the Apple support home page  (<https://support.apple.com>).
- For details on Google Play and how to install this application, see the Google support home page  (<https://support.google.com>).

Pairing

- 1 Turn on the LS-B200W.
- 2 Press and hold down the *Bluetooth* wireless communication switch; the *Bluetooth* wireless communication LED will light up/blink as follows.

Lit	Communication initialization in progress
Blinks quickly	While LS-B200W is communicating
Blinks slowly	Communication is in preparation

3 With the LED lit, start Laser Manager installed on the controller and search for the *Bluetooth* device.

4 Select the LS-B200W you want to connect from the *Bluetooth* devices displayed. The LED will blink rapidly to suggest pairing is completed.

Connecting to a paired controller

- 1 Start Laser Manager.
- 2 Select the LS-B200W you want to connect.
- 3 Connection to the controller is completed; you can remotely control the LS-B200W from the Laser Manager screen.

CONNECTOR FOR EXTERNAL COMMUNICATION

The LS-B200W can be used as the laser detecting sensor for any TOPCON machine control system by connecting the communication cable to the connector for external communication. (Please contact your sales agent for details.)

Connecting the connector cable PC-18 (sold separately) to the connector for external communication will enable the use of the LS-B200W from an external power supply. When the instrument is operated with the external power supply, the power-save and the auto-cut off functions will be invalidated. The LS-B200W will turn on when connection is made to external power supply. The power switch of the instrument will not function when an external power supply is used. Wireless communication will not function when using external communication or an external power supply.

Bluetooth connection is not available while making external communication and using external power supply.

SPECIFICATIONS

Detective range	: 250mm (9.8 in) (The range in which the ON-GRADE position can be changed : 150mm)
Detective angle	: 360°
Detective precision	: Mode1: ±3mm (0.009ft) : Mode2: ±6mm (0.019ft) : Mode3: ±15mm (0.049ft) : Mode4: ±30mm (0.098ft)
Detectable laser wave length	: 633 to 785nm
Laser detecting range (diameter)	: 800m (2625ft) (Using the RL-200 1S/2S)
<i>Bluetooth</i> wireless communication*	: <i>Bluetooth</i> 5.0(Low Energy / Classic)
Transmission method	: FHSS
Modulation	: GFSK [Classic(1Mbps) or BLE] : 4-QPSK [Classic(2Mbps)] : 8-DPSK [Classic(3Mbps)]
Frequency band	: 2.402GHz to 2.480GHz
<i>Bluetooth</i> profile	: SPP, GATT(TOPCON Transfer Service)
Power class	: Class 1
Usable range	: 20m (May vary depending on obstacles between the two instruments as well as other conditions)
Internal battery	: C-size dry batteries 4pcs (sold separately) : Battery pack BT-83Q (sold separately)
External power supply	: DC 10 to 30V
Continuous operating time* (20°C/68°F)	: More than 80 hours (Using alkaline manganese dry batteries) : More than 40 hours(Using Battery pack BT-83Q) Battery using time will vary depending on environmental conditions and operations done with LS-B200W.
Operating temperature	: -20 to 50°C (-4 to 122°F)
Water proof	: IP66 (Based on the standard IEC60529)
Dimensions (W/D/H)	: 158x166x357 (mm) (6.2x6.5x14.0 (in)) (With Mechanical Clamp)
Weight (Without batteries)	: 2.2kg (4.8lbs)
Detective angle, Detective precision and Laser detecting range may vary depending on rotating laser being used or atmospheric conditions.	

EXCEPTIONS FROM RESPONSIBILITY

- The manufacturer, or its representatives, assumes no responsibility for any damage, or loss of profits (change of data, loss of data, loss of profits, an interruption of business etc.) caused by use of the product or an unusable product.
- The manufacturer, or its representatives, assumes no responsibility for any damage, or loss of profits caused by usage different to that explained in this manual.
- The manufacturer, or its representatives, assumes no responsibility for consequential damage, or loss of profits due to heavy rain, strong wind, high-temperature and humidity, or storing or use of the product under unusual conditions.
- Product failures caused by rebuilding are out of warranty.
- Cautions and warnings included in this manual do not cover all the possible events.

Note

- App Store is a trademark or a service mark of Apple Inc., registered in the U.S. and other countries.
- iPhone is trademarks of Apple Inc., registered in the U.S. and other countries.
- Android and Google Play are trademarks of Google LLC.
- QR Code is a registered trademark of DENSO WAVE.
- *Bluetooth*® is a registered trademark of Bluetooth SIG, Inc.
- All other company and product names featured in this manual are trademarks or registered trademarks of each respective organization.

TOPCON CORPORATION (Manufacturer)

75-1 Hasunuma-cho, Itabashi-ku, Tokyo 174-8580, Japan <https://www.topcon.co.jp>
Please see the following website for contact addresses.

GLOBAL GATEWAY <https://global.topcon.com>

©2022 TOPCON CORPORATION
ALL RIGHTS RESERVED

1054307 -01-A